



## REMOVAL AND INSTALLATION

### REMOVAL

1. Remove the floor console ([Refer to 23 - Body/Interior/CONSOLE, Floor/Removal and Installation](#)).
2. Disconnect the wire harness connectors.
3. Remove the screws (1a) and the cup holder (1b).

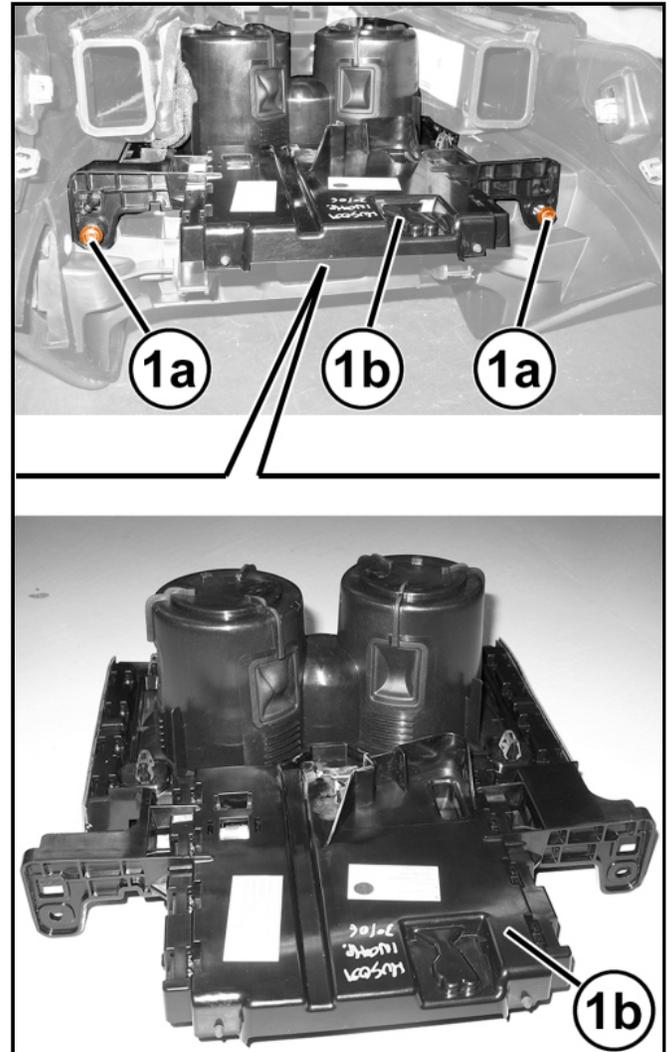


4. If necessary to remove the cover (1b), push the cover firmly in the direction shown by the arrow until the retainers (1c and 1d) release.

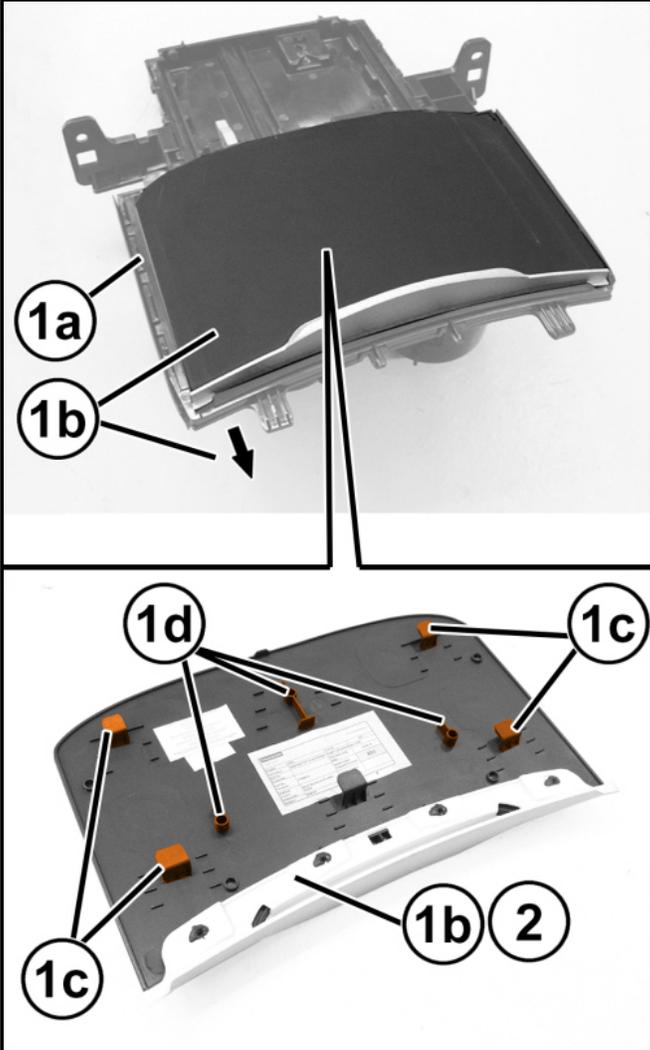

**INSTALLATION**

- 1. Install the cover (1b) if necessary.

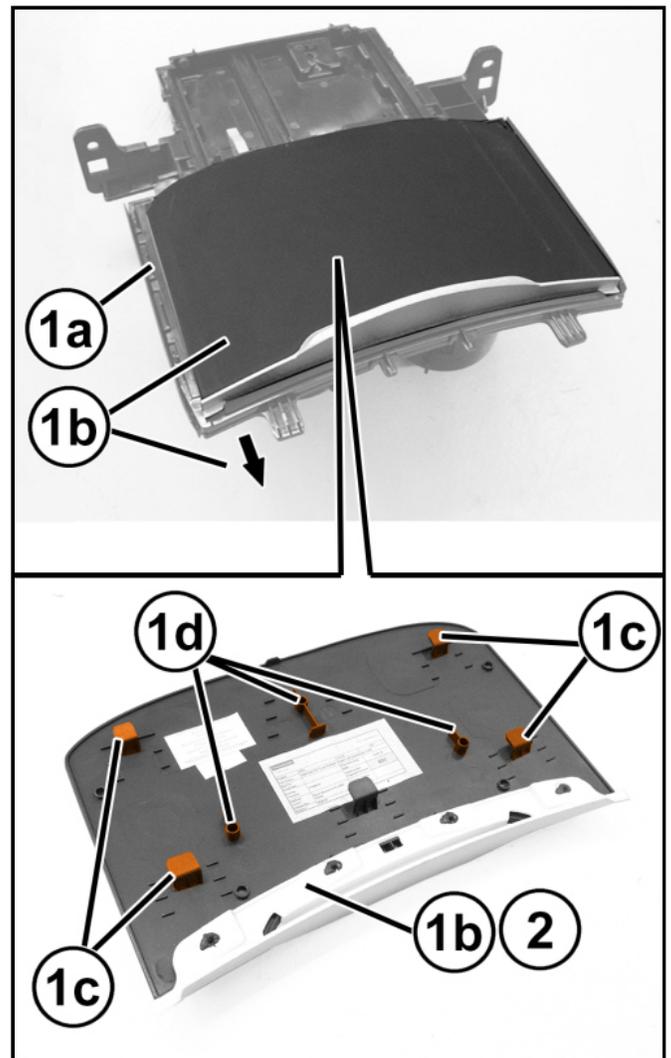

2. If necessary, connect the wire harness connectors and install the cup holder (1b). Install the screws (1a) and tighten firmly.

3. Install the floor console ([Refer to 23 - Body/Interior/CONSOLE, Floor/Removal and Installation](#)).

